

Microphone button mapping

Options and settings

The default actions assigned to microphone buttons depend on the microphone model you use. You can change the assigned actions in the Microphone Buttons pane of the Options dialog box.

This table shows the default mapping and button equivalents for the Philips SpeechMike, Nuance PowerMic III and Nuance PowerMic 4 microphones.

Default action	Button		
	Nuance PowerMic III	Philips SpeechMike	Nuance PowerMic 4
Press and hold	Record	Record	Record
Transfer text	Transcribe	EOL	Rear Function
Accept defaults	Enter/Select (Checkmark)	Rear Button	Enter/Select (Checkmark)
Show/hide Dictation Box	Custom Right	Insert/Overwrite	Function D
Previous field	Tab Backward	Function 1	Tab Backward
Next field	Tab Forward	Function 2	Tab Forward
Previous field	Rewind	Rewind	Rewind
Next field	Forward	Forward	Forward
No default	Stop/Play	Play/Pause	Play/Pause
No default	Custom Left	Function 4	Function B
No default	-	-	Function C
No default	-	-	Function A
Not supported	-	F3	-
Not supported	-	"-j-"	-

LEARN MORE

To find out more about the microphones optimised for Dragon Medical, please visit newzealand.nuance.com/powermic



About Nuance Communications, Inc.

[Nuance Communications](https://www.nuance.com) is a technology pioneer with market leadership in conversational AI and ambient intelligence. A full-service partner trusted by 77 percent of U.S. hospitals and 85 percent of the Fortune 100 companies worldwide, Nuance creates intuitive solutions that amplify people's ability to help others. Nuance is a Microsoft company.